


# WIRING YORK HH8 WITH RDS KIT TO YORK JHE MODEL AIR HANDLER


ADP 24VRDS Field Kit

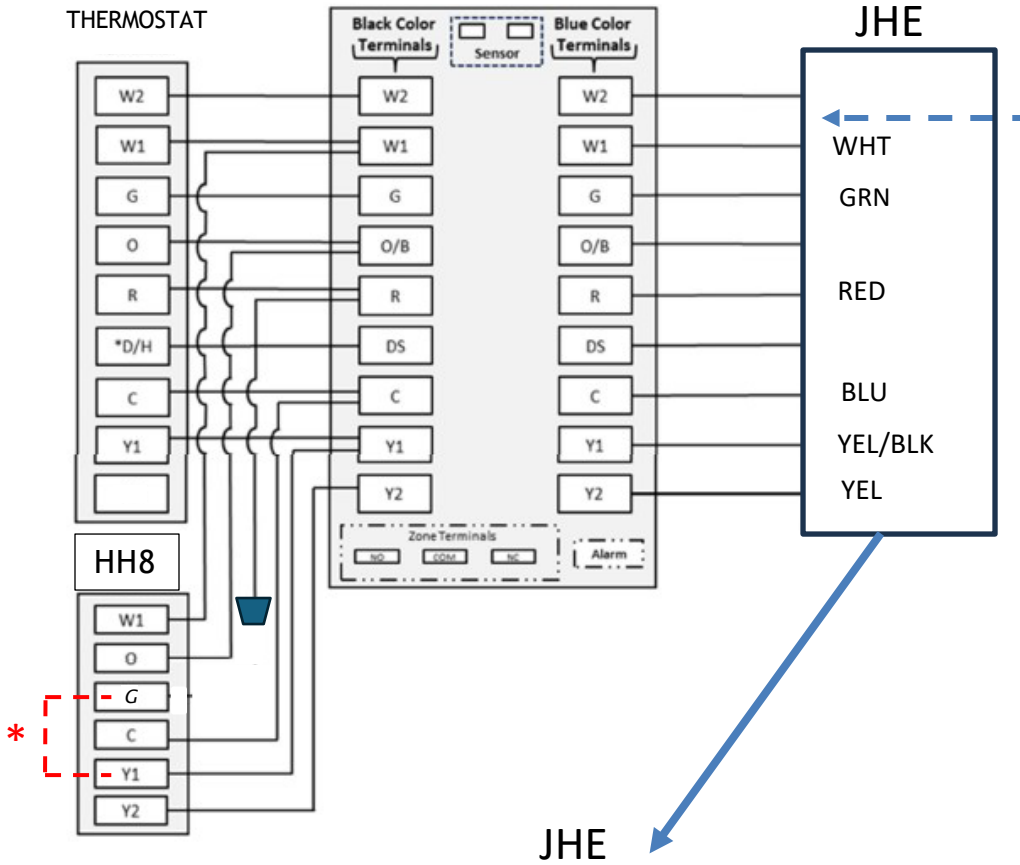

## WIRING NOTES:

- \*W1 & W2 Only used if electric heat strips are installed.
- \*R terminal on the HH8 outdoor terminal strip not used.
- \* Add Jumper between G and Y1 terminal on the HH8 outdoor terminal strip.
- \*Y2 terminal on the outdoor HH8 is an output to energize a higher blower speed when needed by the HH8 logic.

JHE

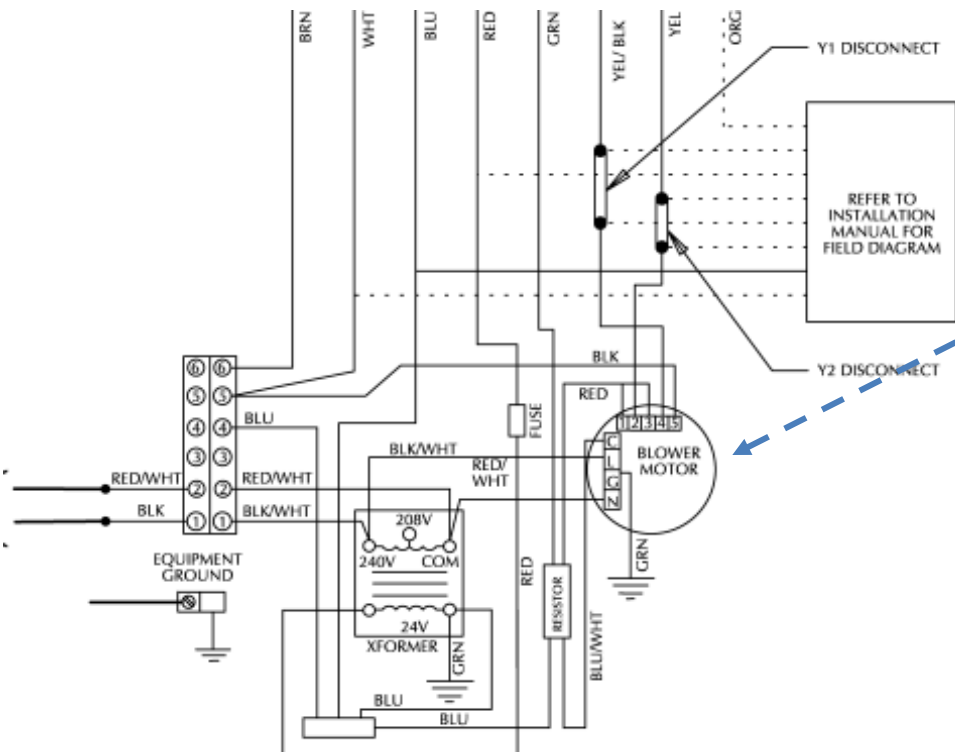

## JHE WIRING NOTES:

- \*There are 9 speeds on the JHE air handler. 1 is the lowest speed and 5 is the highest speed.
- \*\* You can reposition speed wires from ECM motor as required for proper airflow requirements for the HH8 tonnage unit installed. Refer to tech guide or installation manuals for JHE and HH8 for CFM required for your system.